

SOHAM INDUSTRIAL MACHINERY LTD.

Primary Requirement for

Florabatti counting & packing machine

- Power Supply nearest to machine 2HP 1 phase. MCB-10Amp (3 core)-1.
- Air compressor 1.5HP with 100 Galan tank/ 100litter- 1. 10mm PU pipe connector and manual valve at Air delivery point)
- Air filter for compressor (Your scope)
- Req. air Connection 10 mm PU pipe nearest to machine
- BOPP roll as per your packing size (20 micron -plain) (Heat Sealable).
- Send details of stick / pouch.
- Send us min. 5 kg. Incense & 7 kgs roll for machine testing.
- We provide only 2 Shute with machine.
- This machine is suitable only for BOPP PLAIN ROLL
- For printed roll required eye mark system (charges will extra)
- You have to buy extra Shute for big pouch.
- Inform us your factory time and off day.
- Payable service available any time.
- Lifetime telephonic service free (9 AM to 6 PM, Sunday weekly off)
- You have to provide responsible person at the time of training and installation.
- Training & Installation at your site by our engineer (you have to bear to &fro tickets, all the meals and lodging)(We are not available during corona time, we provide installation video and installation by video calling.)

Required Roll Width(max. weight of each rolls is 7 Kgs.)

Sr. No.	No. of Sticks	Width of BOPP Roll
1	5 to 7 Sticks	80 mm
2	8 to 14 Sticks	100 mm
3	15 to 28 Sticks	120 mm
4	29 to 45 Sticks	140 mm
5	46 to 60 Sticks	160 mm
6	61 to 70 Sticks	180 mm
7	71 to 75 Sticks	200 mm

Required rolls core id is 3 inches

INSALLTION VIDEO LINK

1. **FCPM1** :---- <https://youtu.be/OKxoyLYEqkQ>
2. **FCPM 2** :--- <https://youtu.be/VivpqfUb0VA>
3. **FCPM3** :--- <https://youtu.be/XvN3szlYmgo>
4. **FCPM4** :-- <https://youtu.be/tDew8OwmQSk>
5. **FCPM5** :--- <https://youtu.be/MMeuZ5bw8QA>
6. **FCPM 6** :--- <https://youtu.be/2urtCx-WF3A>
7. **FCPM 7** :-- <https://youtu.be/K0A4yDhoSOk>
8. **FCPM 8** :---- https://youtu.be/_Rxqe1CQrNY
9. **FCPM 9** :--- <https://youtu.be/xQPf9hw-lxg>
10. **FCPM 10** :-- https://youtu.be/9Ur_XAaZirs
11. **FCPM 11** :--- <https://youtu.be/dt1CGB-LsDc>
12. **FCPM 12** :---- <https://youtu.be/xuWYeMHw0SA>

For Training, Installation and Service Support Contact Person

Mr. Vishal sardhara +91 7567380501

Spare Department: +91 9879027848

FLORABATTI COUNTING AND PACKING MACHINE

